
WIRING DIAGRAM

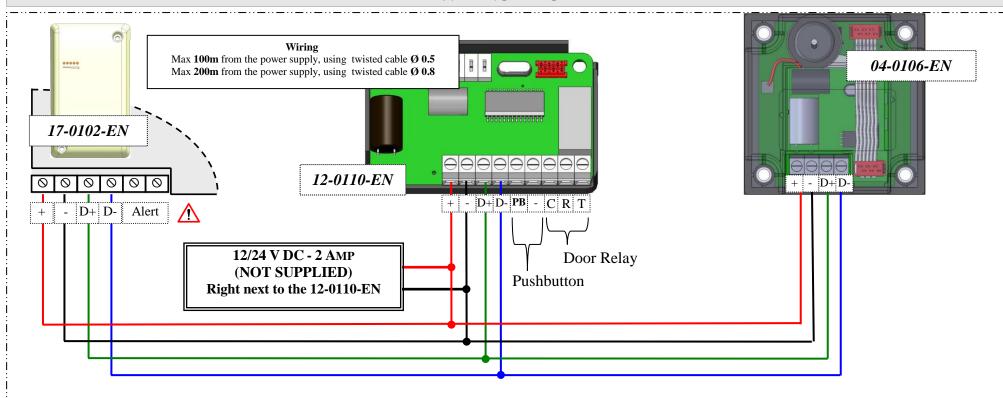

• NEVER PLACE THE 17-0102-EN MODULE IN A METAL CASE!

STOP


- <u>Alert and door opening</u> are not possible at the same time without adding another 12-0110-EN card.
- The LEDs on the 17-0102-EN module indicate the surrounding GPRS network reception quality: the more LEDs you have lit, the better your reception. For optimal functioning, ensure that you have three LEDs lit.
- The presence of **keypad beeps indicates** that the central unit is correctly connected (**D**+/**D bus wired**).
- The presence of **back lighting** indicates that **the keypad is correctly powered.**
- DO NOT FORGET TO NOTE THE 17-0102-EN CONTRACT NO. AND THE RELATED ENTRANCE. You will need this to set up your equipment at www.intratone.com



06-0131-EN: Installation guide

Page 1 / 2 EN-V231-0121-AA

WIRING AND SETTING A DOOR CONNECTED TO A RELAY BOARD

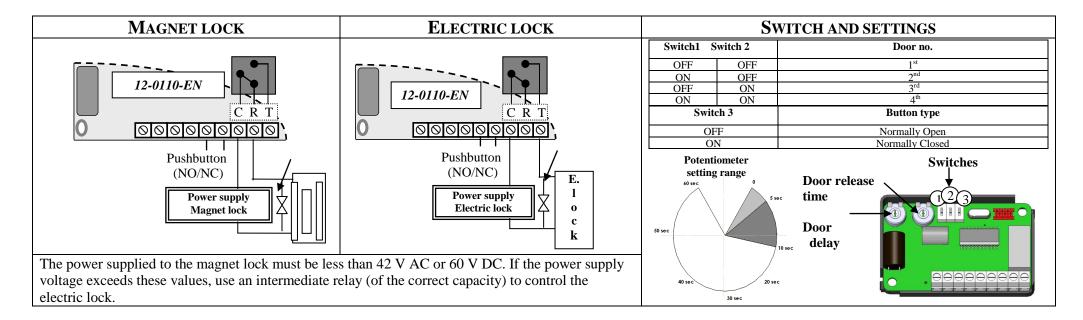

IMPORTANT: The proper operation and long-life are dependent on the fitting of the varistors supplied with the central unit.

- 1. Varistors must be connected as close as possible to the electric lock or magnet.
- 2. Free access times should be avoided for doors fitted with electric locks!
- 3. The varistor supplied is 12 V.

IF YOU INSTALL SEVERAL POWER SUPPLIES, ENSURE THAT YOU CONNECT EACH EARTH (-) TOGETHER.



06-0131-EN: Installation guide

Page 2 / 2 EN-V231-0121-AA